
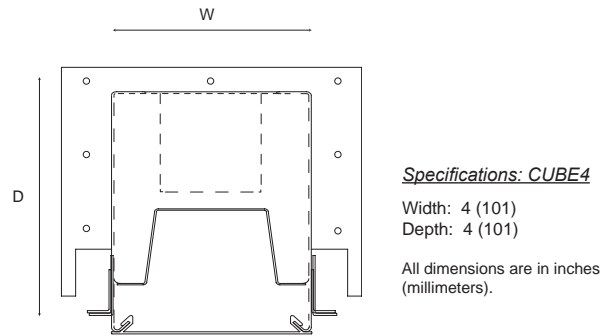







CUBE2, CUBE4

SCREW SLOT INSTALLATION INSTRUCTIONS

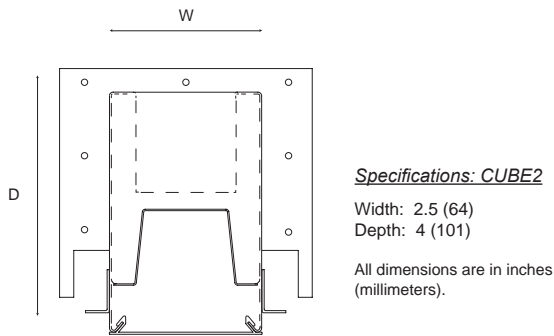


PART LIST

- A: Access plate
- B: Support wire
- C: BX cable connector
- D: Wire connectors
- E: Screws

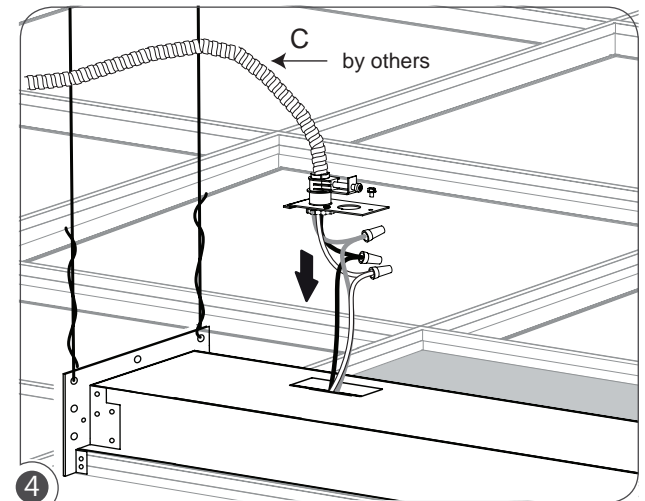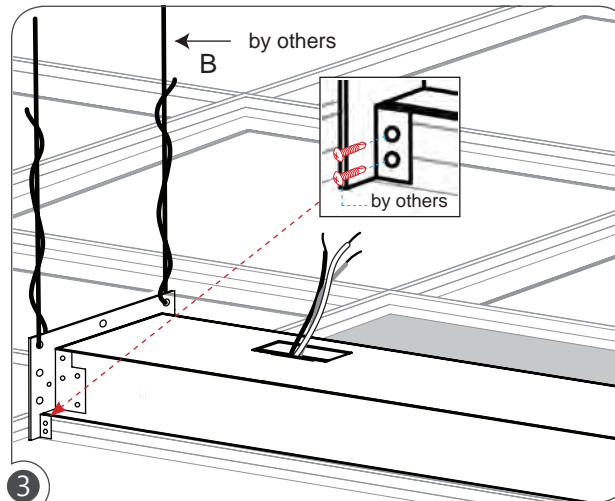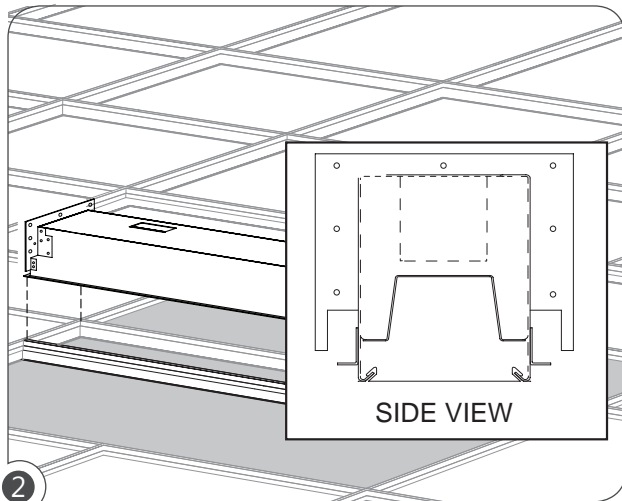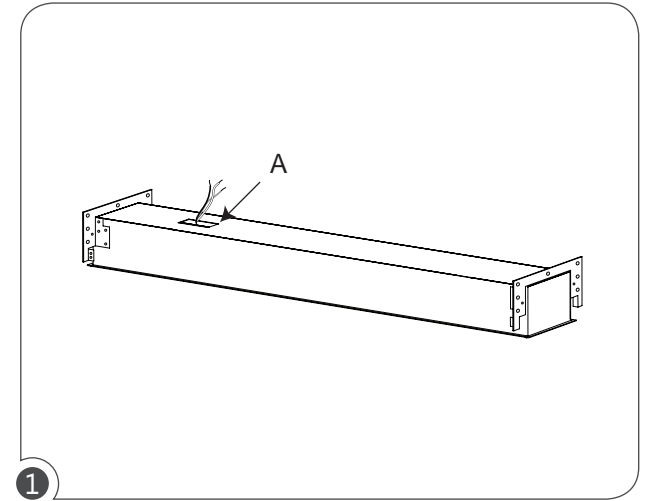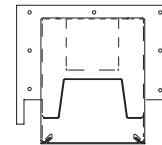


CUBE2, CUBE4

SCREW SLOT INSTALLATION INSTRUCTIONS

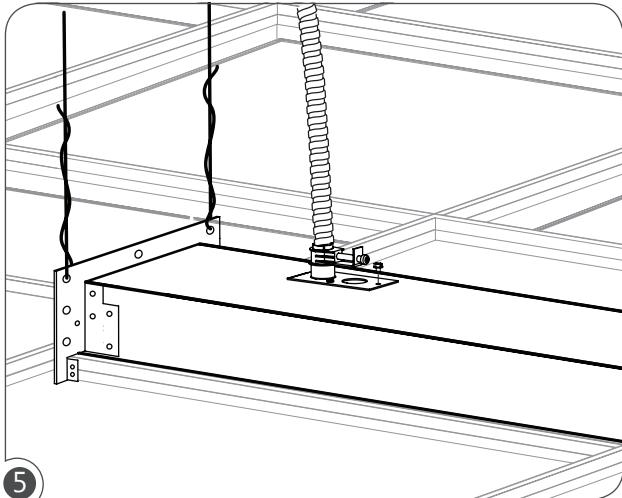


5

Secure wires and install access plate to fixture.

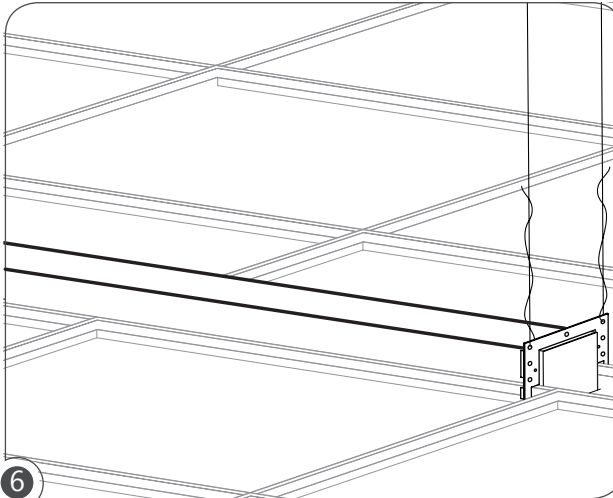

6

Make sure both ends of fixtures is secure with support cable and bracket is properly installed between screw slot grind and fixture.

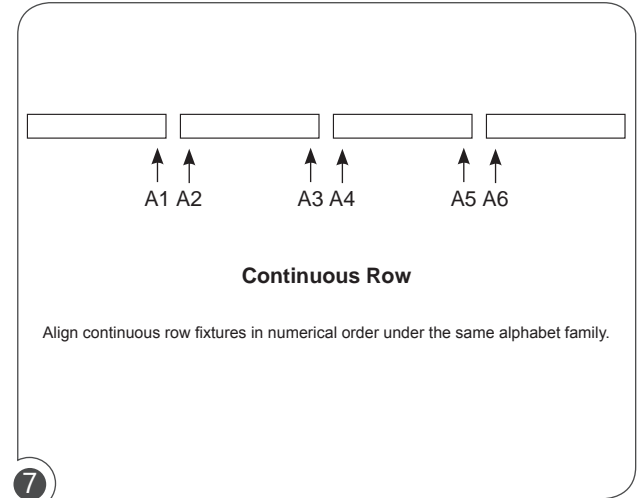

7

Refer to [7A, 7B and 7C] for detailed installation instructions.



CUBE2, CUBE4


SCREW SLOT INSTALLATION INSTRUCTIONS

CONTINUOUS ROW

TOOL(S) NEEDED:


Option 1) Cordless drill and an elbow or L-shape adapter with Philips Insert Bit extension.

Option 2) Flexible Screwdriver with Philips Insert Bit.

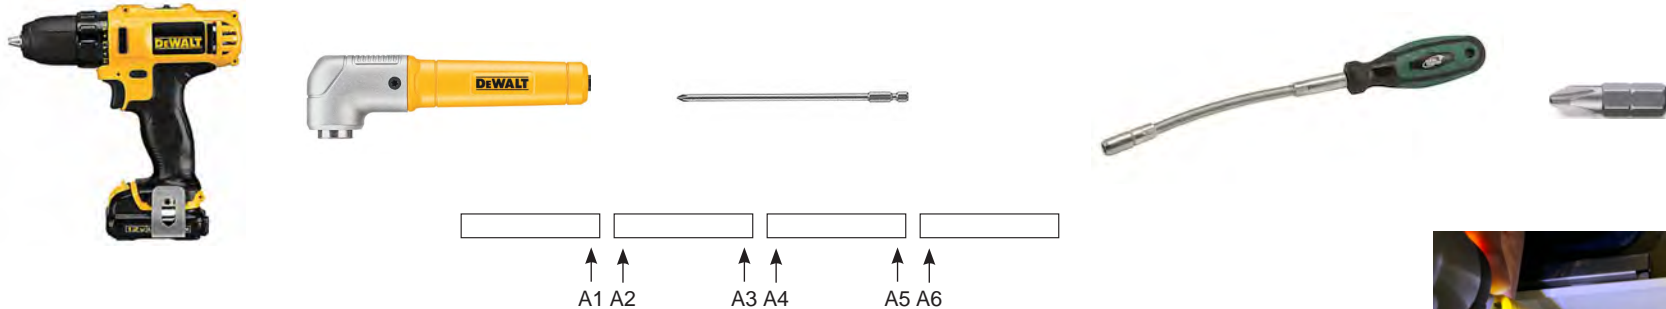


Continuous Row


Align continuous row fixtures in numerical order under the same alphabet family.

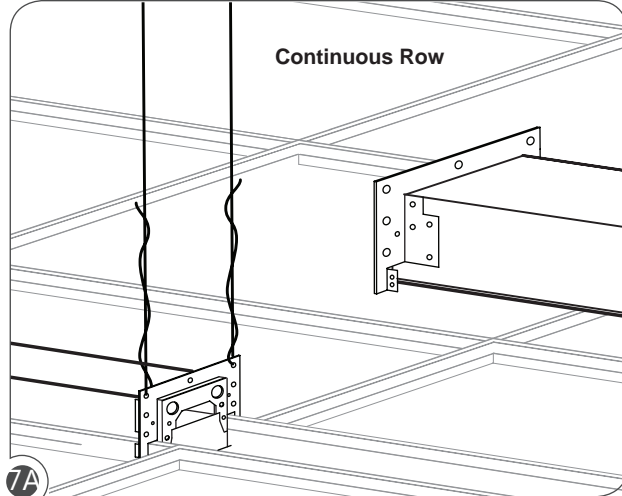

Align fixtures side by side onto screw slot ceiling.

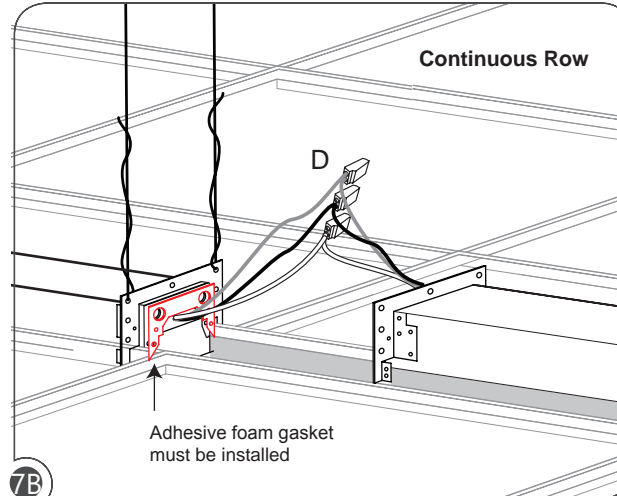

Connect power wire together from each fixture running end to end for continuous row with Wire connectors(D).

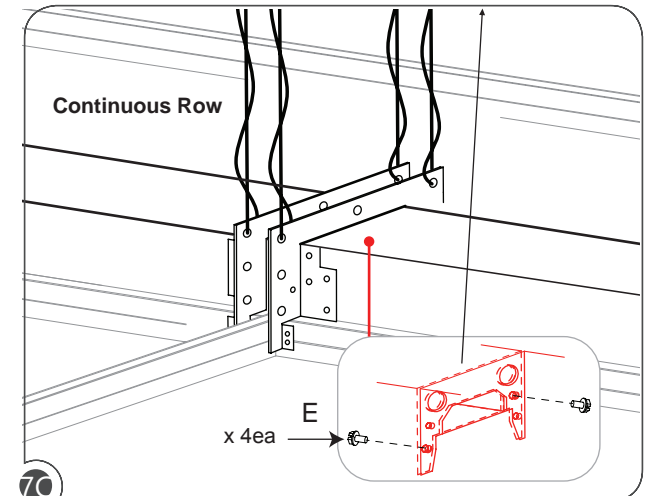

Align fixtures together and Screw from the inside with 4 screws(E).

