



**Advanced Fuel Security,**  
Empowering Your Business



User Manual

---

## **Smart Fuel Cap**

A Connected Cap for Fuel  
Protection and Monitoring



# INSTALLATION MANUAL



Read all steps before installation



Installation does not require any equipment or tool




Compatible with Ø105mm standard fuel tank neck




Compatible with mechanical anti-theft lock systems

Opening

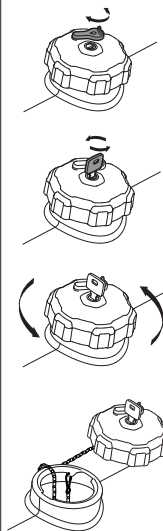


Closing

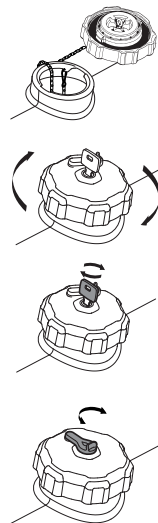

# INSTALLATION


1

To install Smart Fuel Cap, remove existing tank cap.

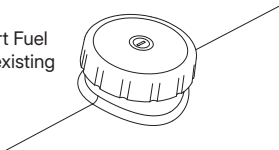


2

Attach the chain of Smart Fuel Cap to the tank neck.

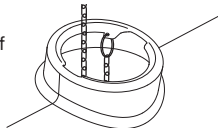


3

Rotate the dust cover to access the lock cylinder.

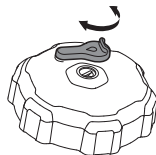

4


Insert the key and turn counterclockwise to unlock.

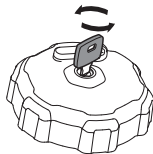

## INSTALLATION — MONTAJ


5

Place the cap onto the tank neck and rotate clockwise to secure.

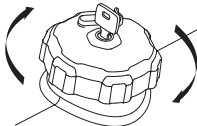


7

Rotate the dust cover back to cover the lock cylinder.

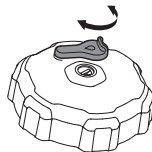

6

Turn the key clockwise to lock, then remove the key.

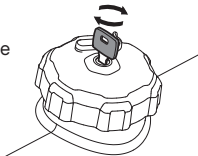

8

Use the protective cover when operating in the field.

