



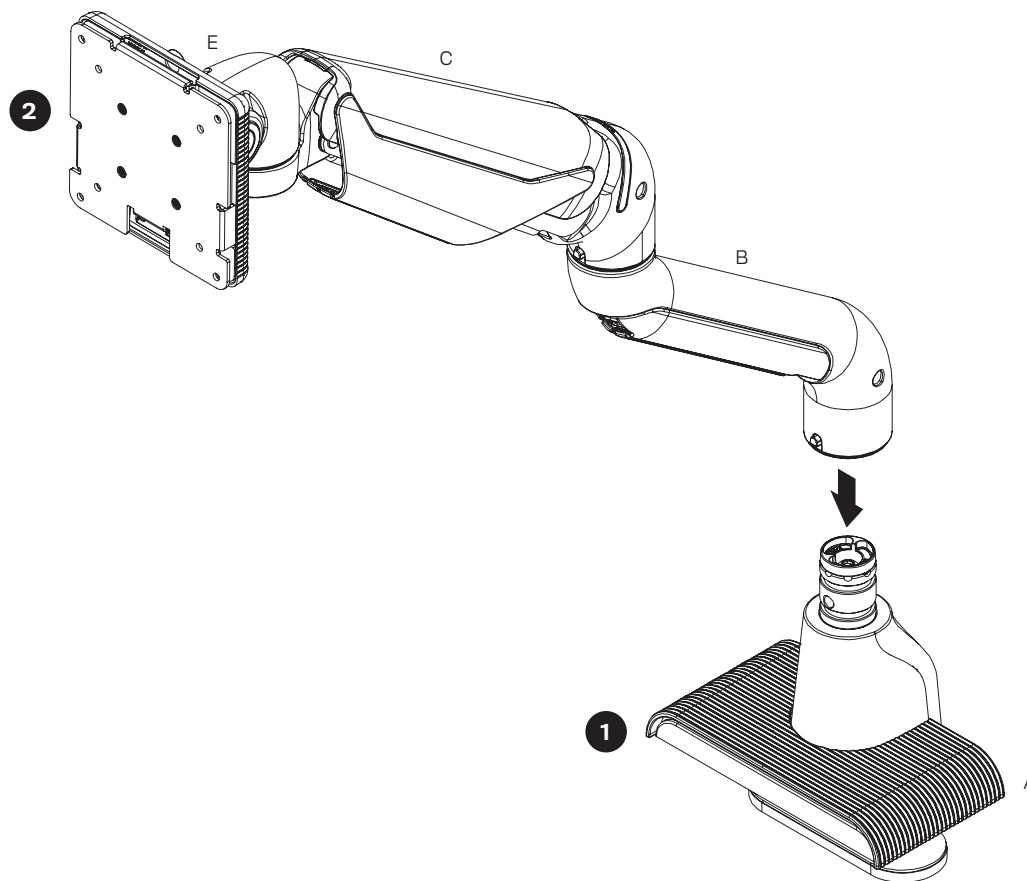

ROTATION STOP ADJUSTMENTS (CONTINUED ON NEXT PAGE)


1a

180°

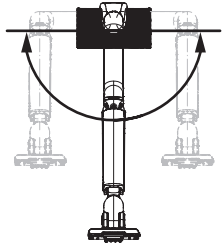


Arms must face forward to
Change the rotation stop range.


1b

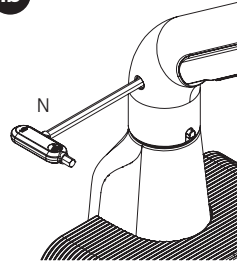

To set to a 180 degree range, use the
long end of the tool to push the rotation
stop switch to the side that shows a
straight icon.

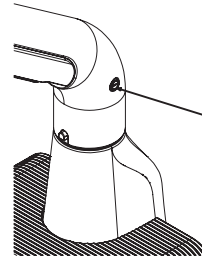


Straight Icon

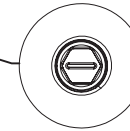

When the straight icon is visible, the
rotation stop is set to 180 degrees.


1a

90°

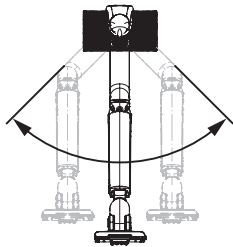


Arms must face forward to
Change the rotation stop range.


1b

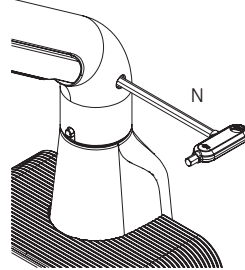

To set to a 90 degree range, use the
long end of the tool to push the rotation
stop switch to the side that
shows a corner icon.

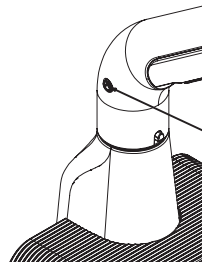


Corner Icon

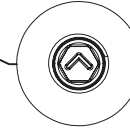

When the corner icon is visible, the
rotation stop is set to 90 degrees.


1a

360°


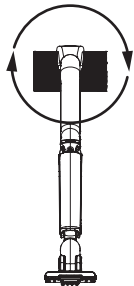


Arms must face forward to
Change the rotation stop range.

1b

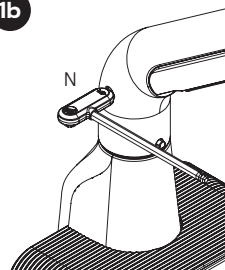


To remove the rotation stop, use the
short end of the tool to push the rotation
stop switch to the center position where
the hole is empty on both sides.

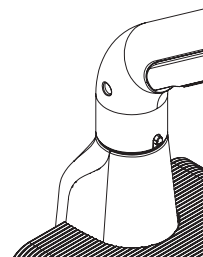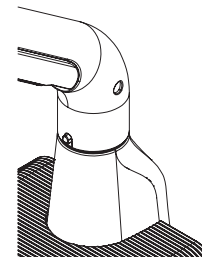

When no icon is visible on either side,
the rotation stop is removed, allowing the
arm to freely spin 360 degrees.



ADJUSTMENT ACCESS

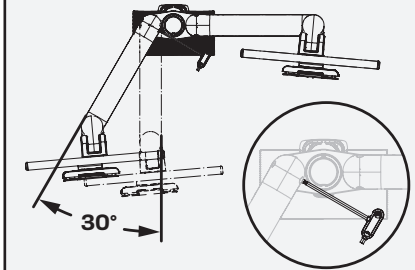

When the arm is forward on the pole
or dual arm, the rotation stop switch is
blocked from access for adjustment.

In these cases the arm can be rotated
slightly (about 30°) to one side or the
other to allow the tool to access the
rotation stop switch.




CAUTION

Rotation stops must be engaged
prior to the attachment of monitors.


ROTATION STOP ADJUSTMENTS - ANGLED MOUNT INSTALLATIONS

**ANGLED MOUNT INSTALLATIONS**


The rotation stop range can be rotated in increments of 45 degrees for angled mount installations.

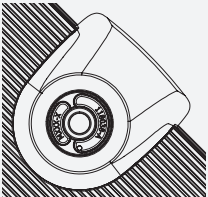


2

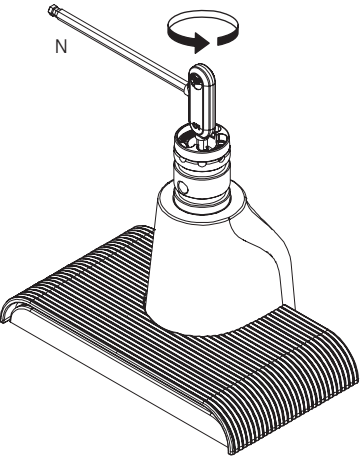


OR

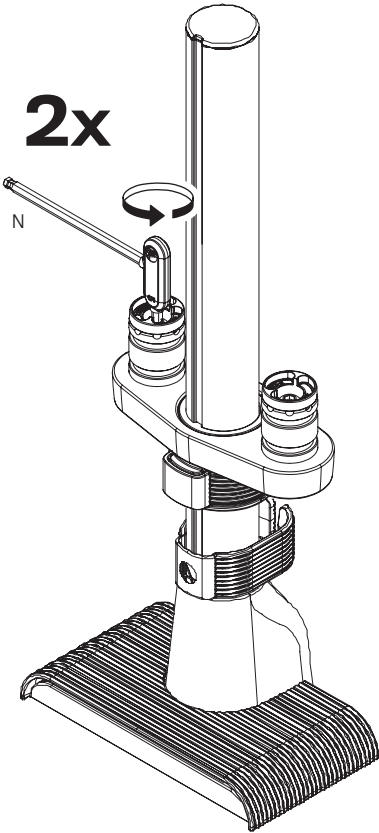

3

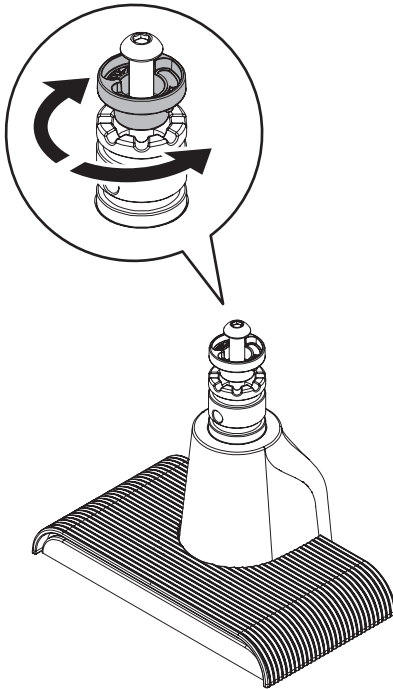


4

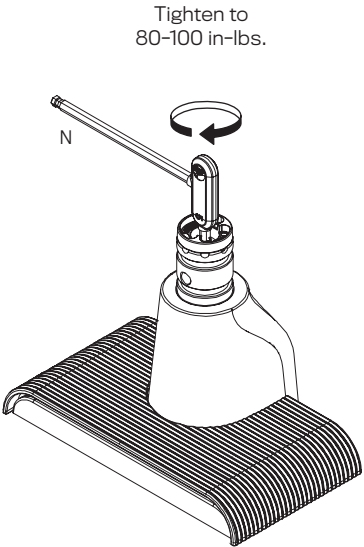


C-CLAMP CONFIGURATION (CONTINUED ON NEXT PAGE)


5

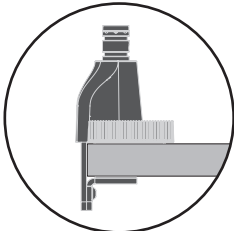

Desk thickness
up to 1.5" (38mm)

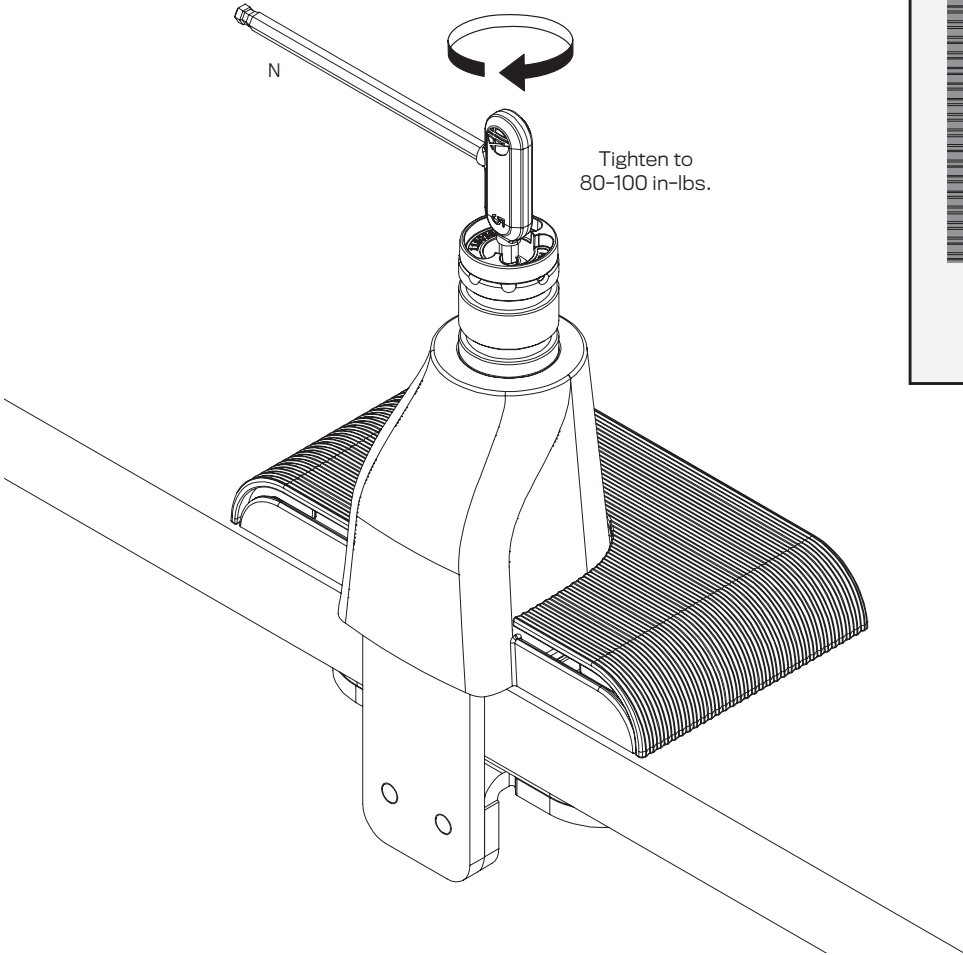

 **DEFAULT ROTATION STOP ORIENTATION**

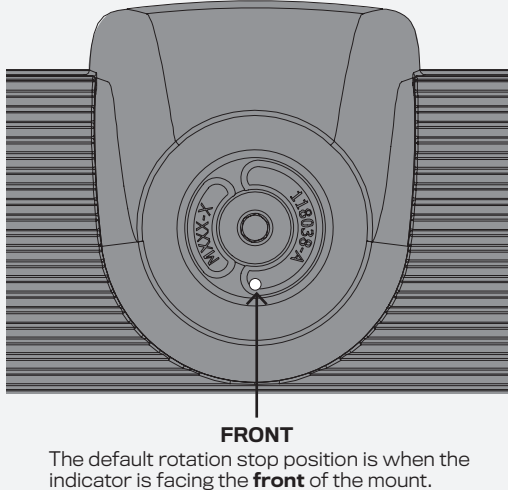

C-CLAMP CONFIGURATION - LIMITED SPACE INSTALLATIONS

LIMITED SPACE MOUNTING

Obstruction

In instances when there's not enough space to slide the mount assembly onto the desk, the mount can be disassembled to attach to the desk.

6

Loosen screws or remove completely to allow maximum clearance between mount and obstruction.

2x

7

.5" (12mm)
minimum width required
when screws are fully
removed from mount.

8

Desk thickness
up to 1.5" (38mm)


2x

9


Tighten to
80-100 in-lbs.

GROMMET CONFIGURATION


10

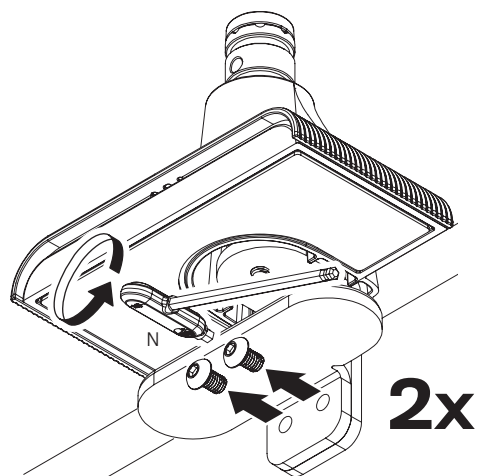


11

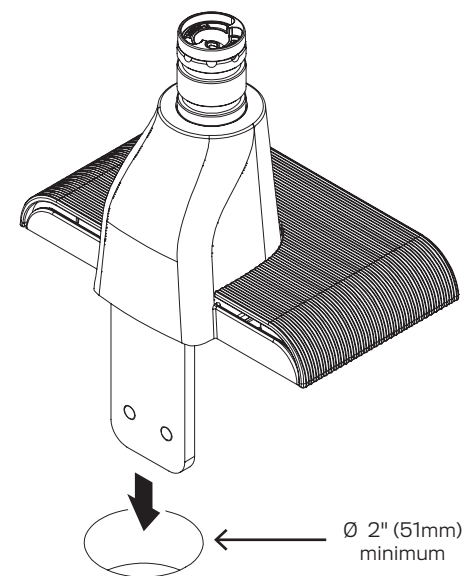


12

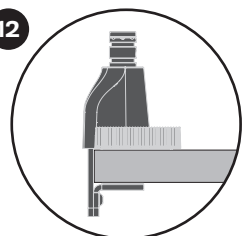

Desk thickness
up to 1.5" (38mm)

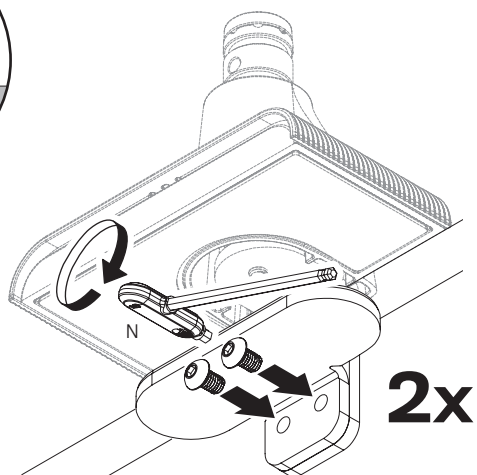


13

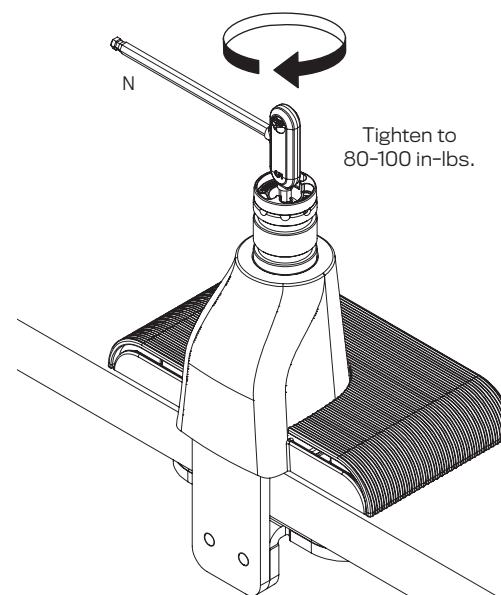


Tighten to
80-100 in-lbs.

THRU-DESK CONFIGURATION

14

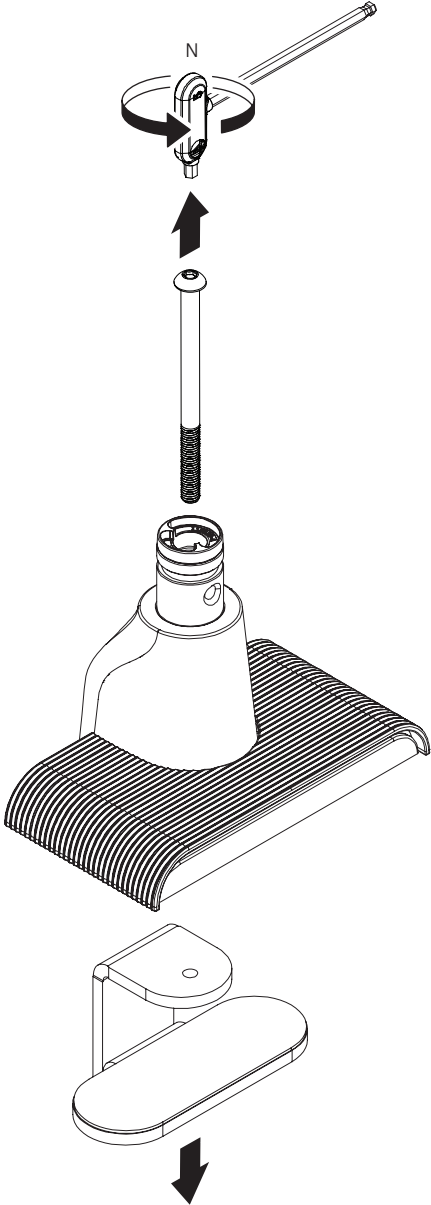

15

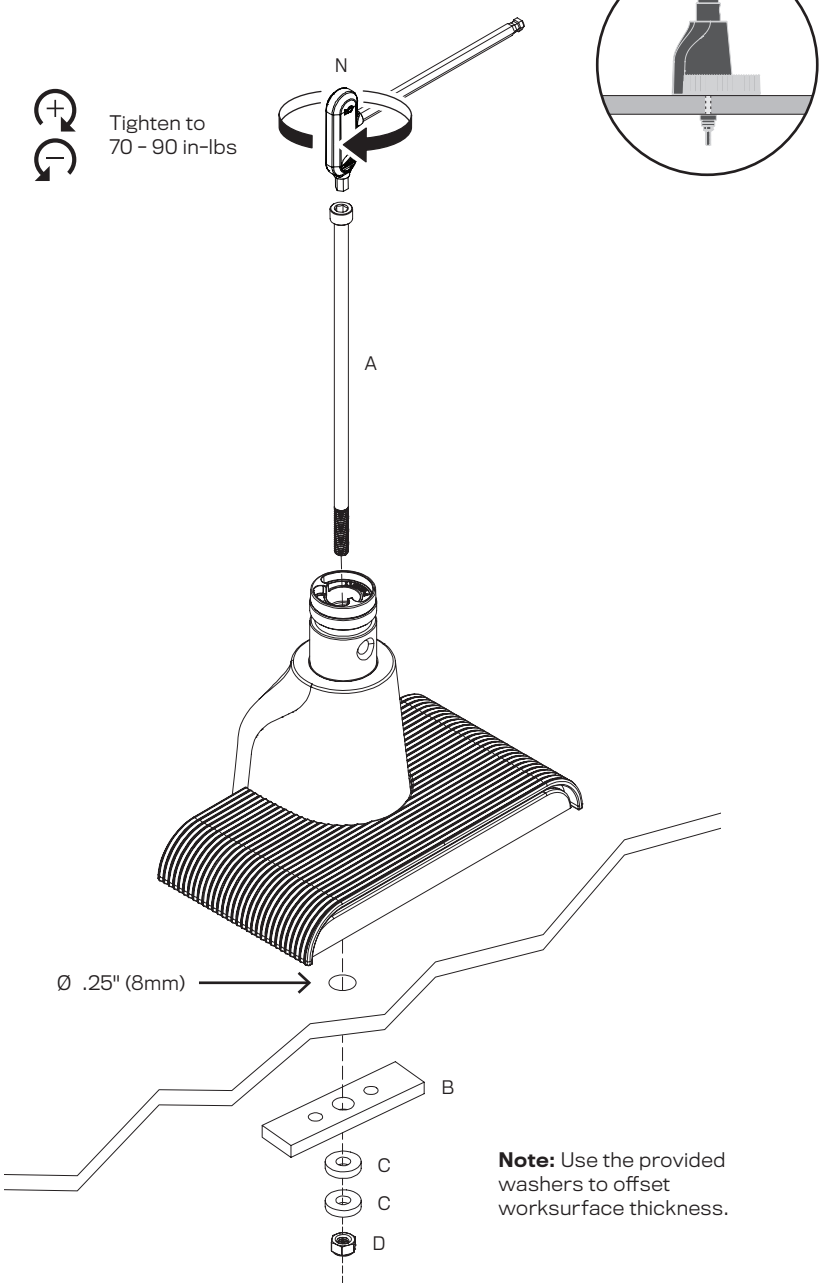


WALL MOUNT

16

Remove the pre-installed cover to access the mounting holes.

After wall mount installation is complete, reinstall the cover.

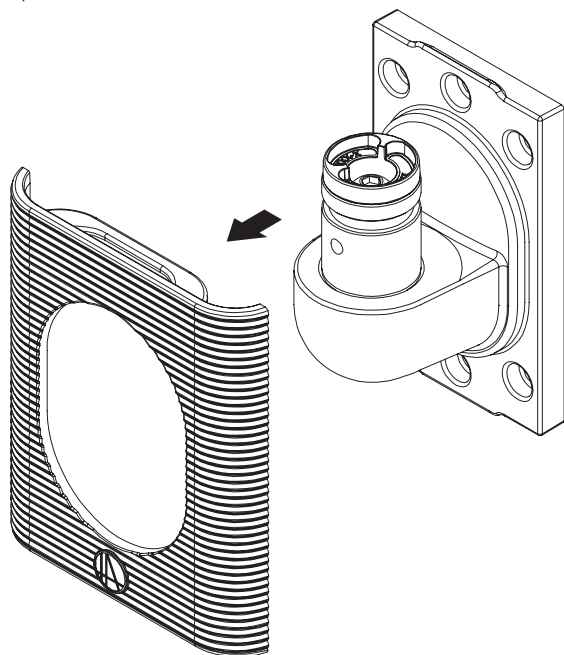

17




Use the two center holes or the four outer holes based on the mounting surface.

Two Hole Install (Center Holes)

Mounting hardware is not included.

Use appropriate hardware for your mounting surface.

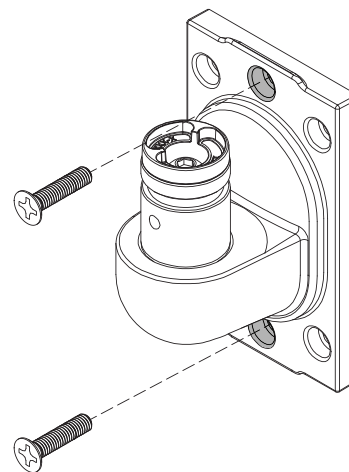


OR

Four Hole Install (Outer Holes)


Mounting hardware is not included.

Use appropriate hardware for your mounting surface.

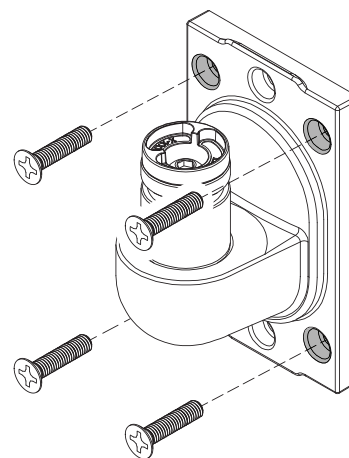


DUAL ADAPTER INSTALLATION

18

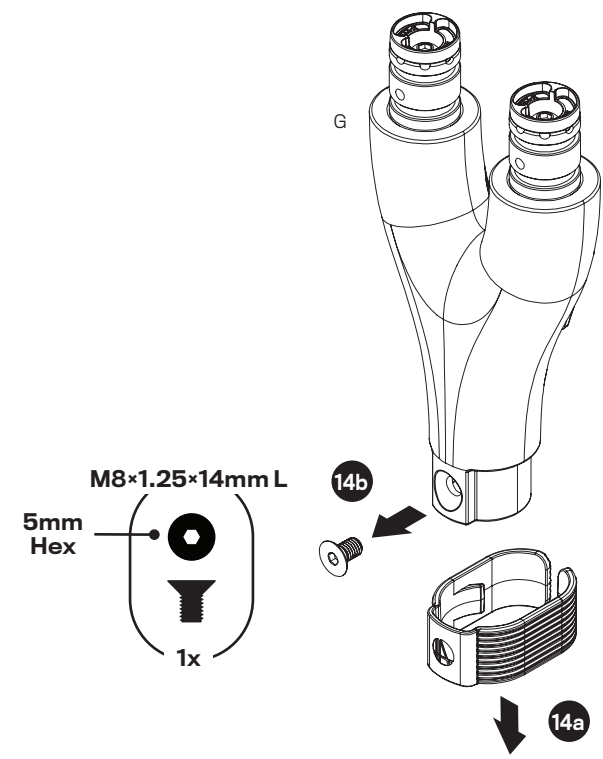


19

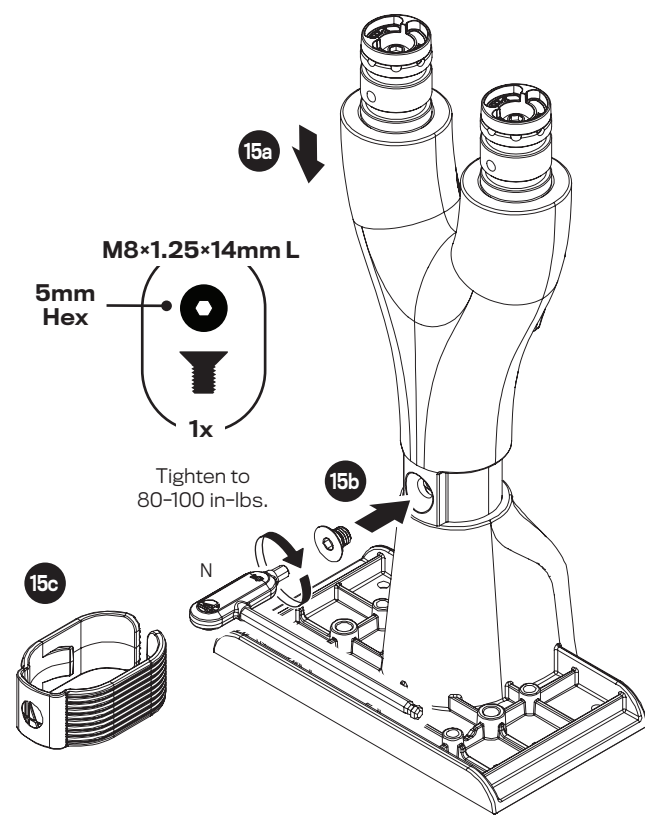


POLE INSTALLATION: SINGLE TIER & DUAL TIER

20

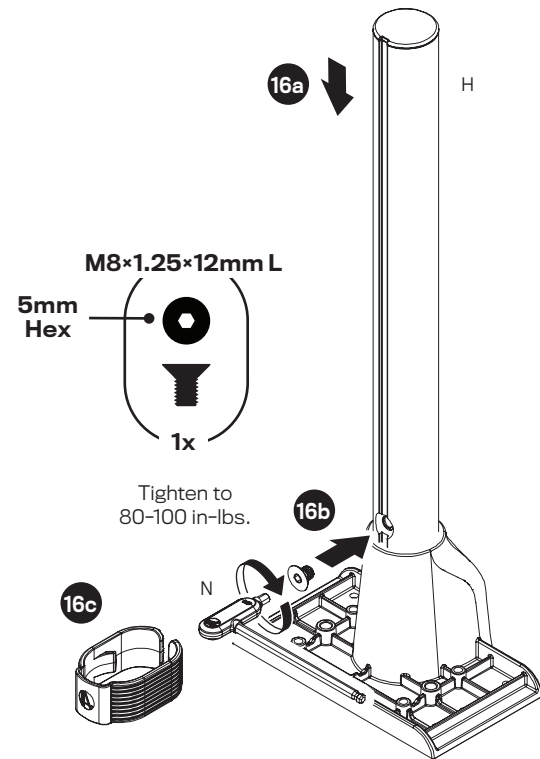


21


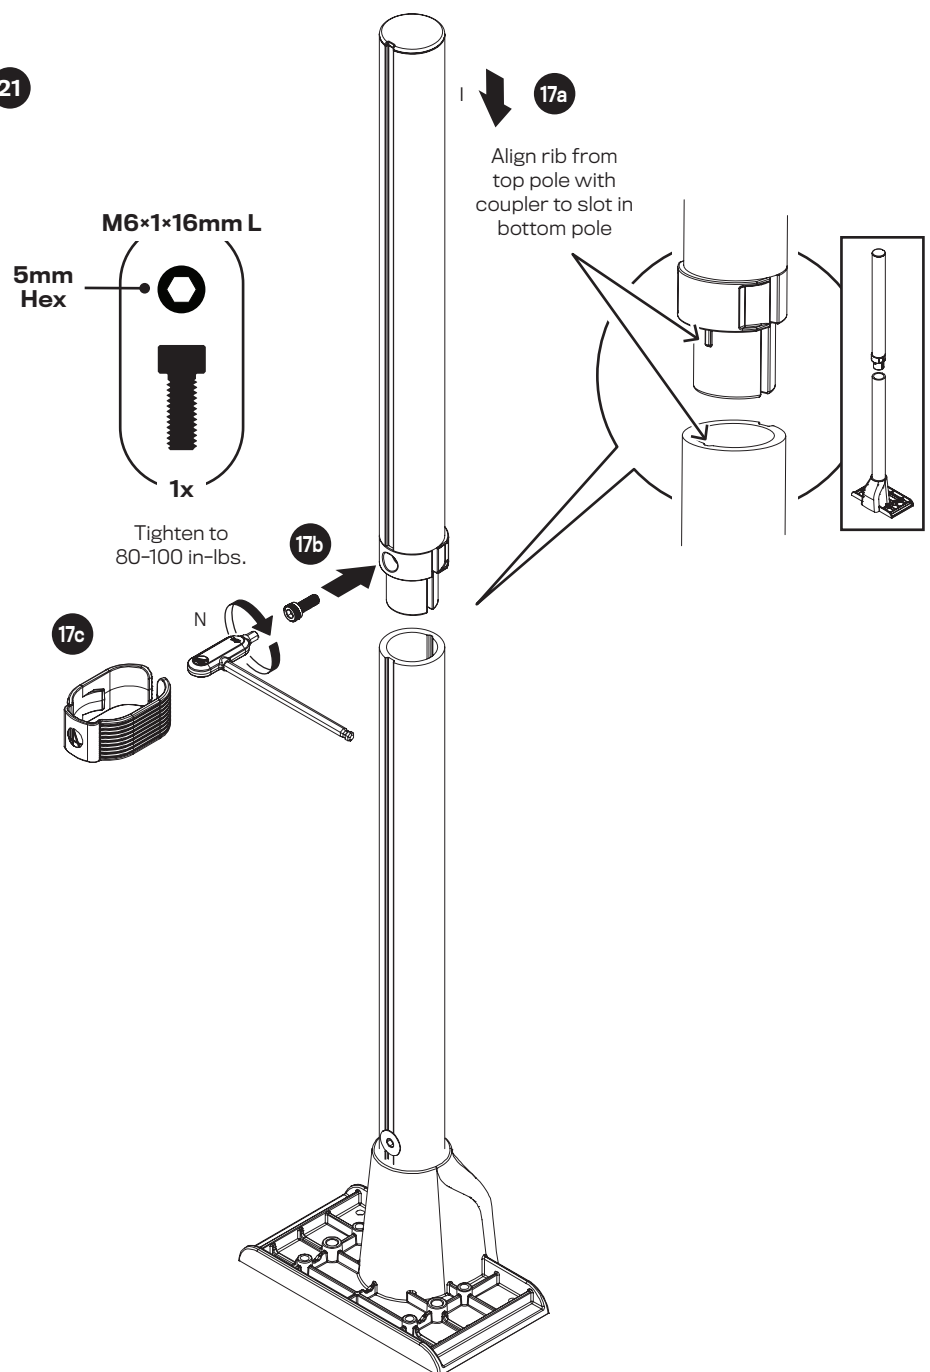


PUSH-BUTTON QUICK CONNECTIONS

22

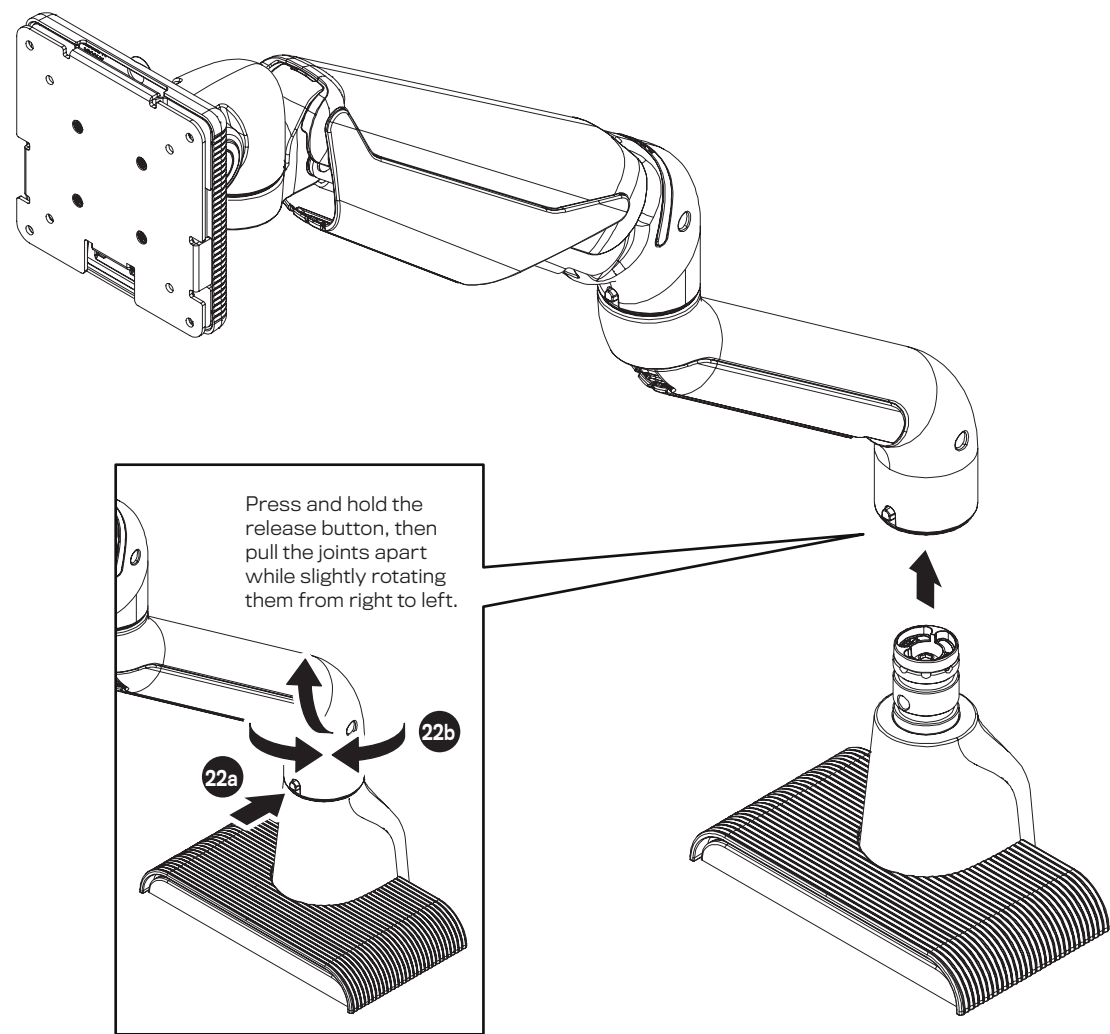


SINGLE AND DUAL YOKE HEIGHT ADJUSTMENT

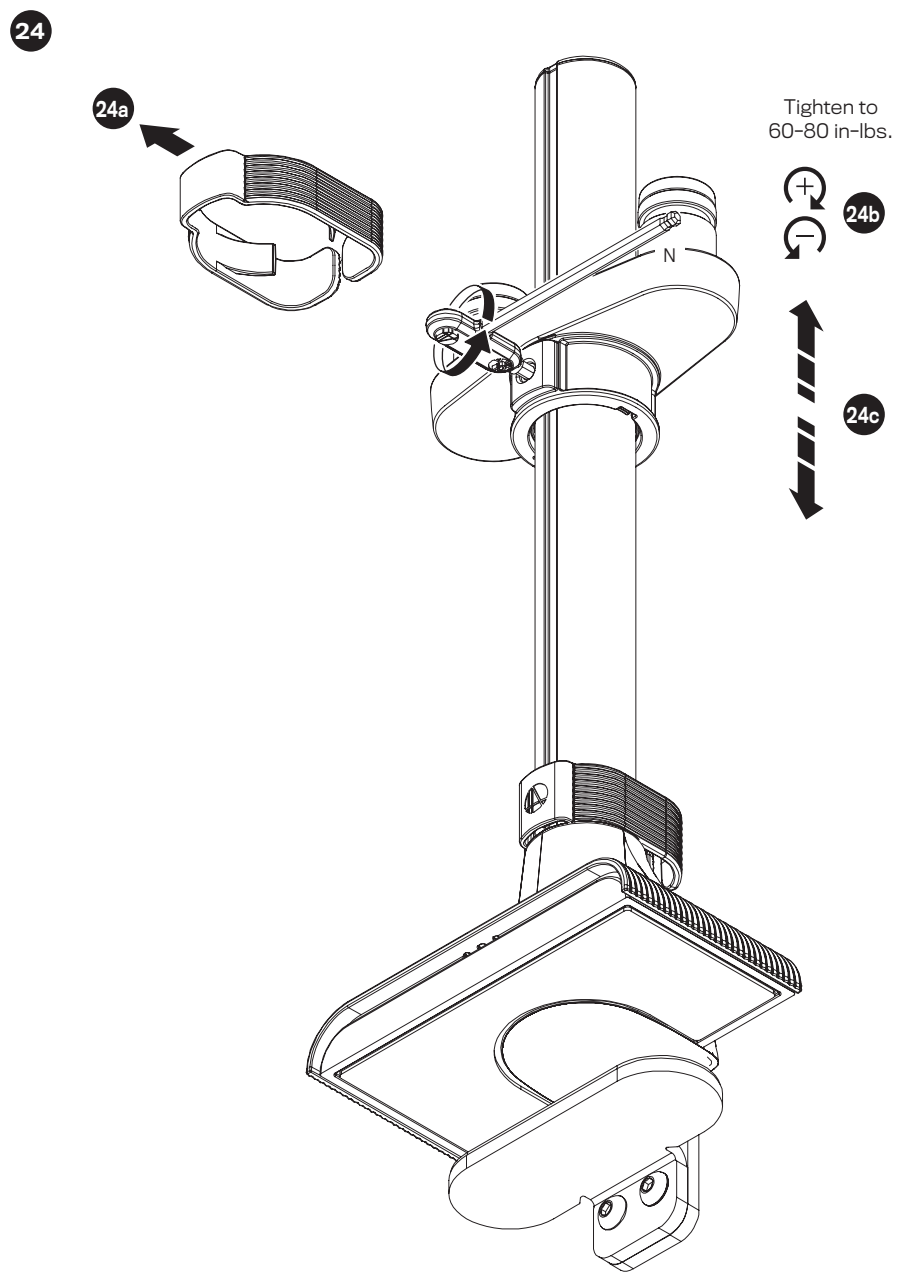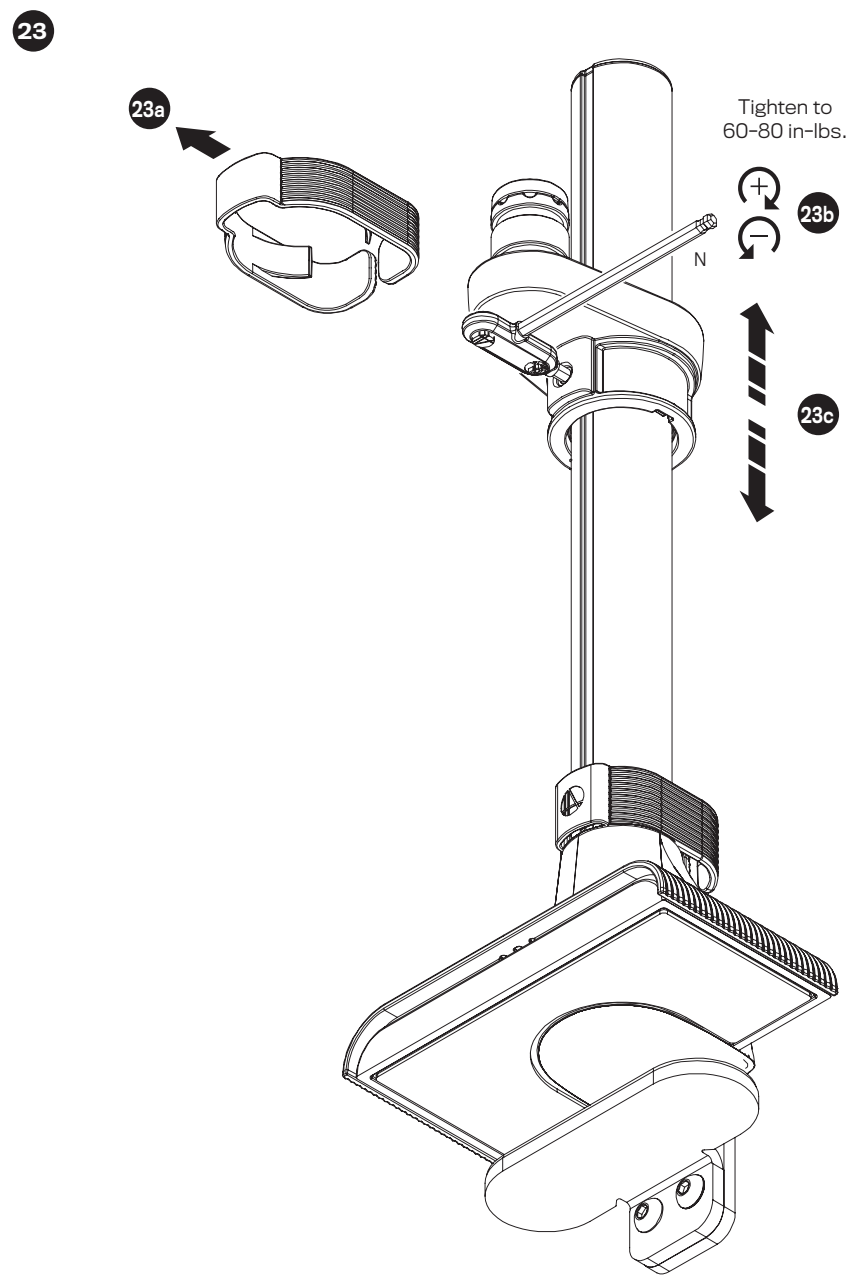

VESA PLATE REMOVAL (TILTER AND SLIDER)


* 0.25" Spacer Kit (#RP404923-B) and 0.50" Spacer Kit (#RP404923-C) sold separately.

25

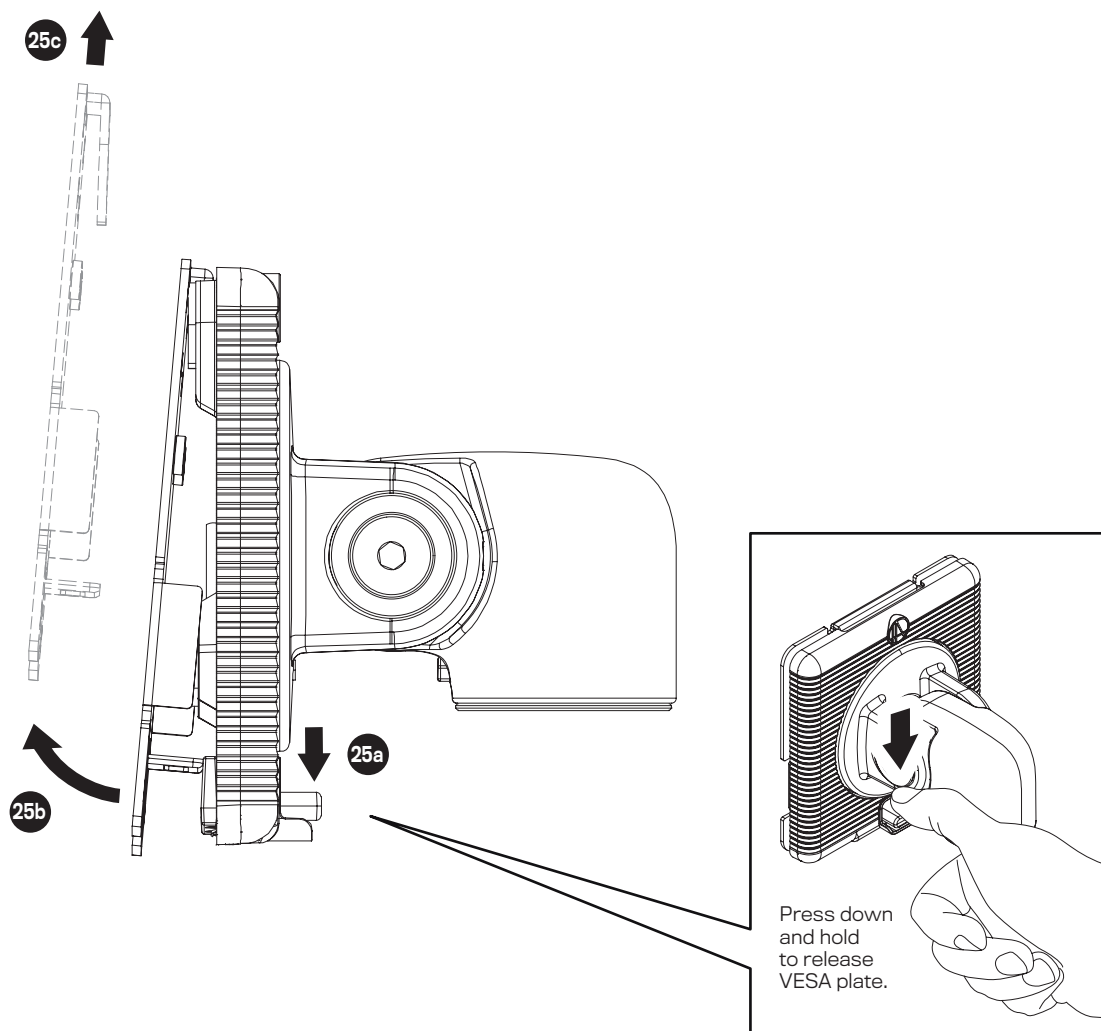


VESA PLATE ASSEMBLY (TILTER AND SLIDER)

26


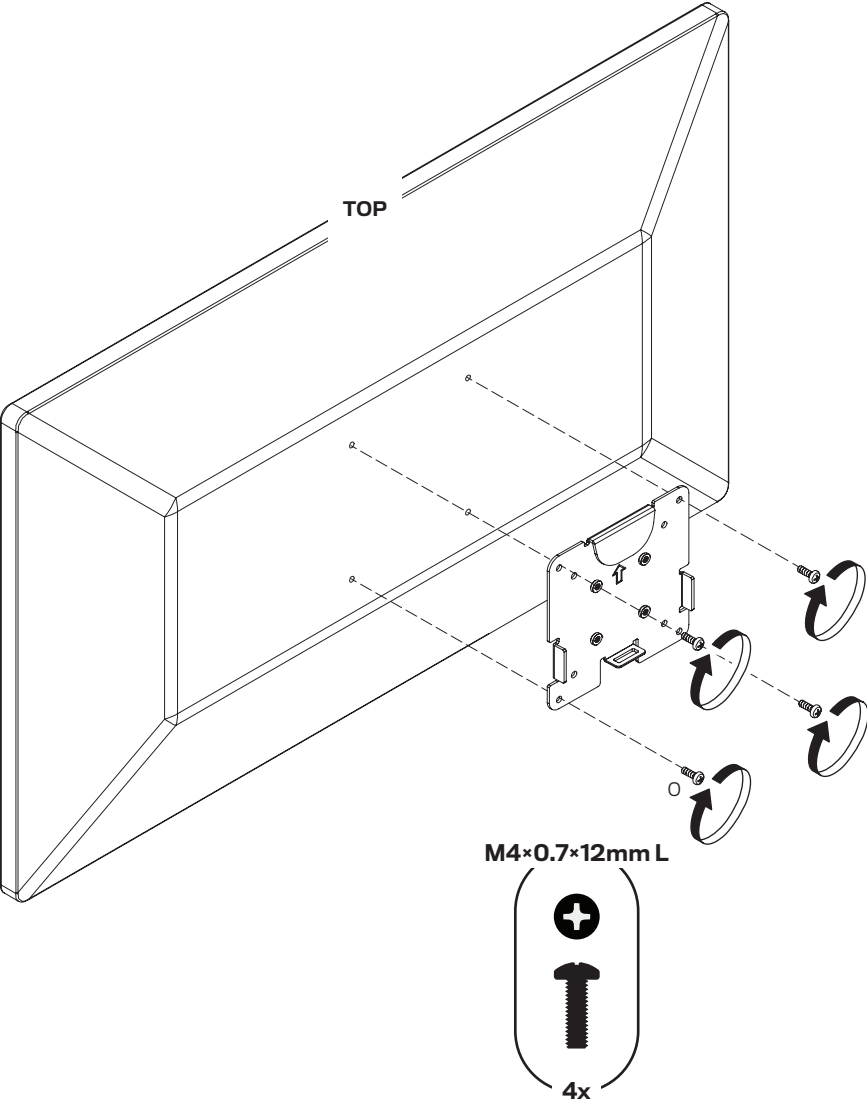


OR

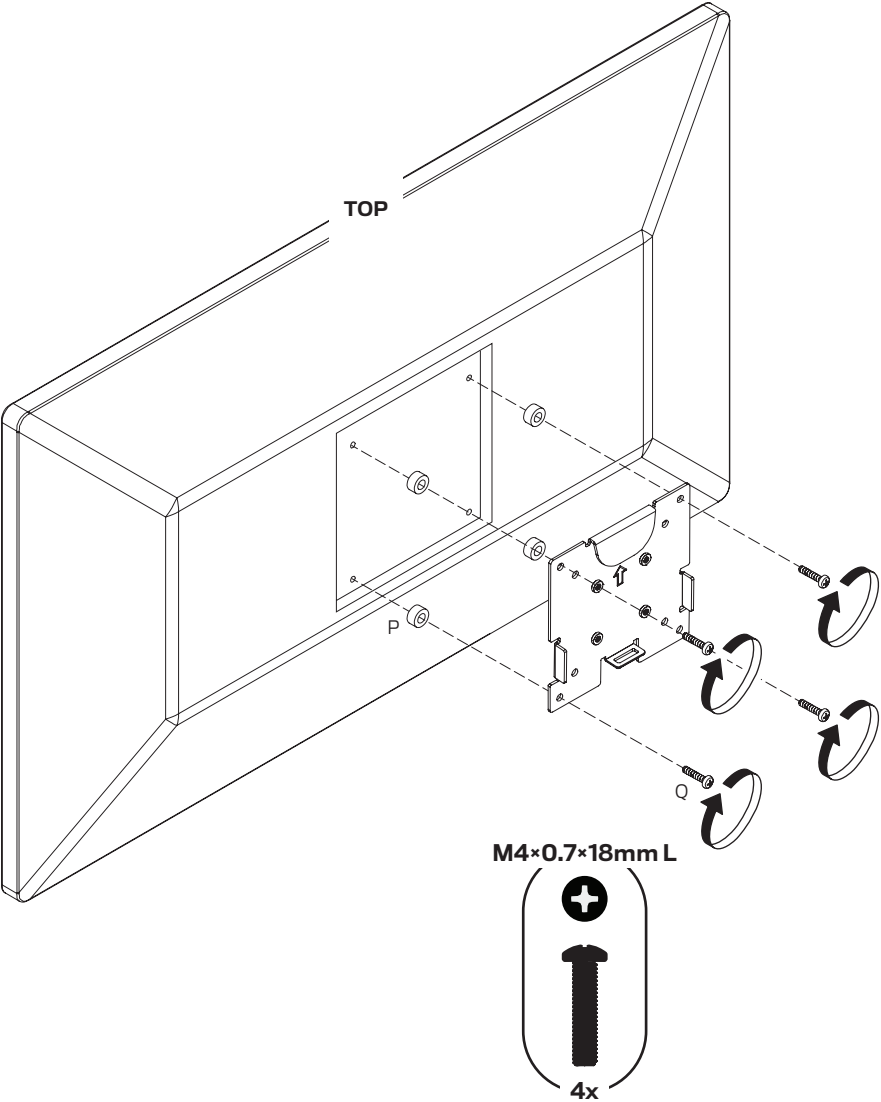



VESA PLATE ASSEMBLY (TILTER AND SLIDER)

27

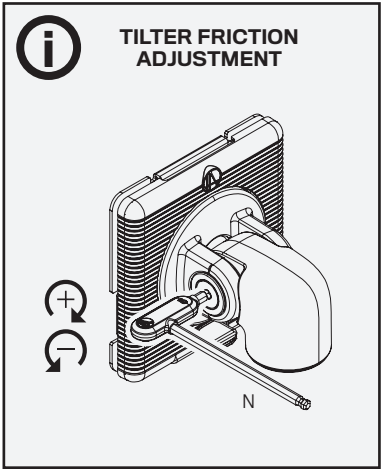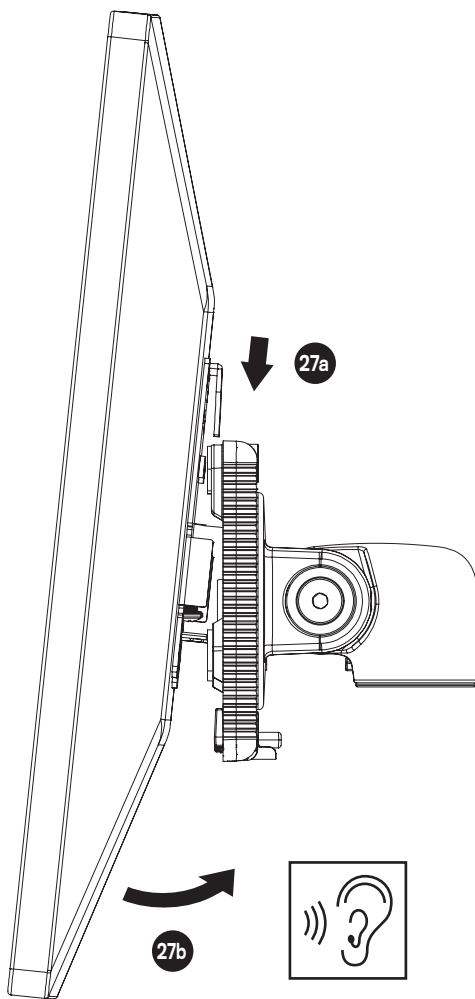

DYNAMIC ARM COUNTERBALANCE


28

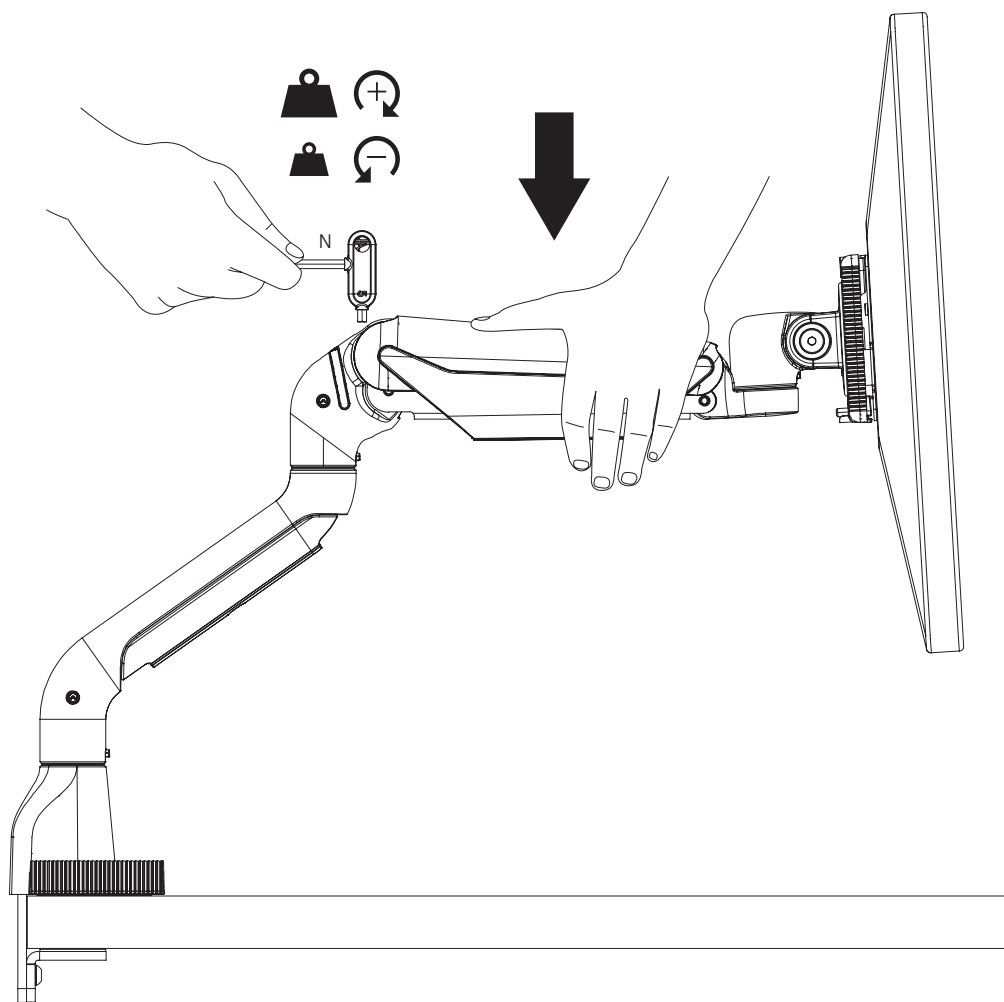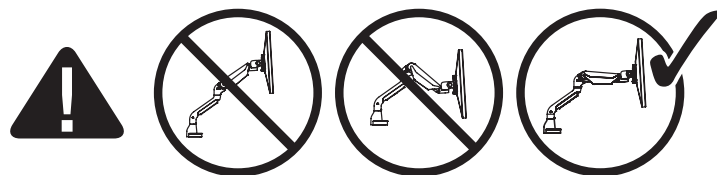

i TENSION INDICATOR


The tension indicator can be used to quickly set multiple arms that will be utilizing the same monitor weight to the correct tension.

- ① ~ 5 lbs. (2.2 kg)
- ② ~ 12 lbs. (5.4 kg)
- ③ ~ 23 lbs. (10.4 kg)
- ④ ~ 35 lbs. (15.9 kg)
- ⑤ ~ 45 lbs. (20.4 kg)

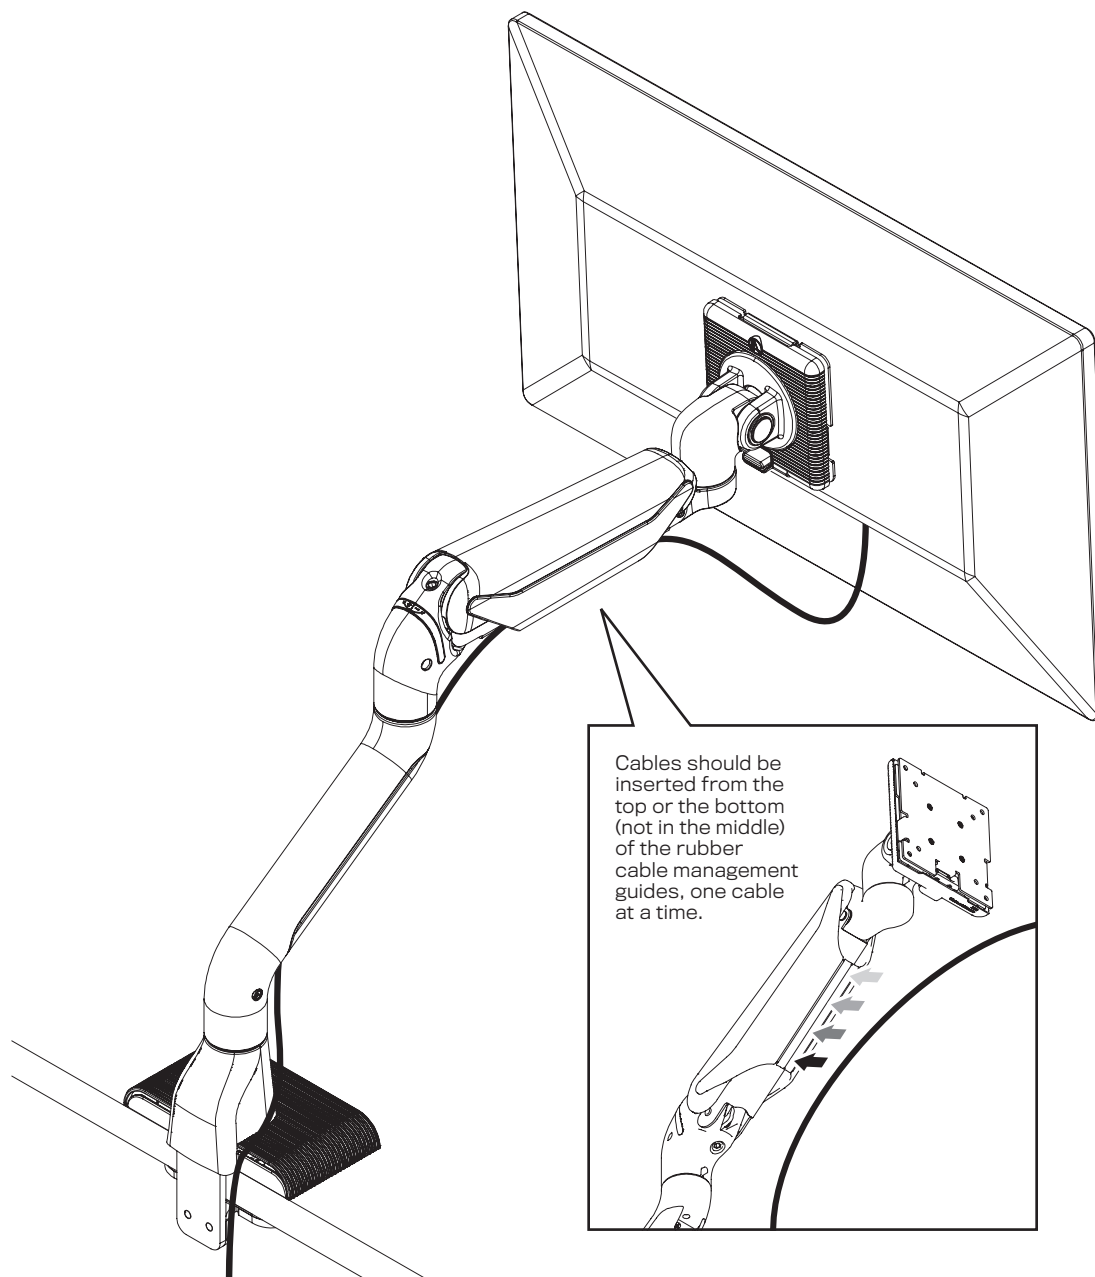

CABLE MANAGEMENT (CONTINUED ON NEXT PAGE)

30

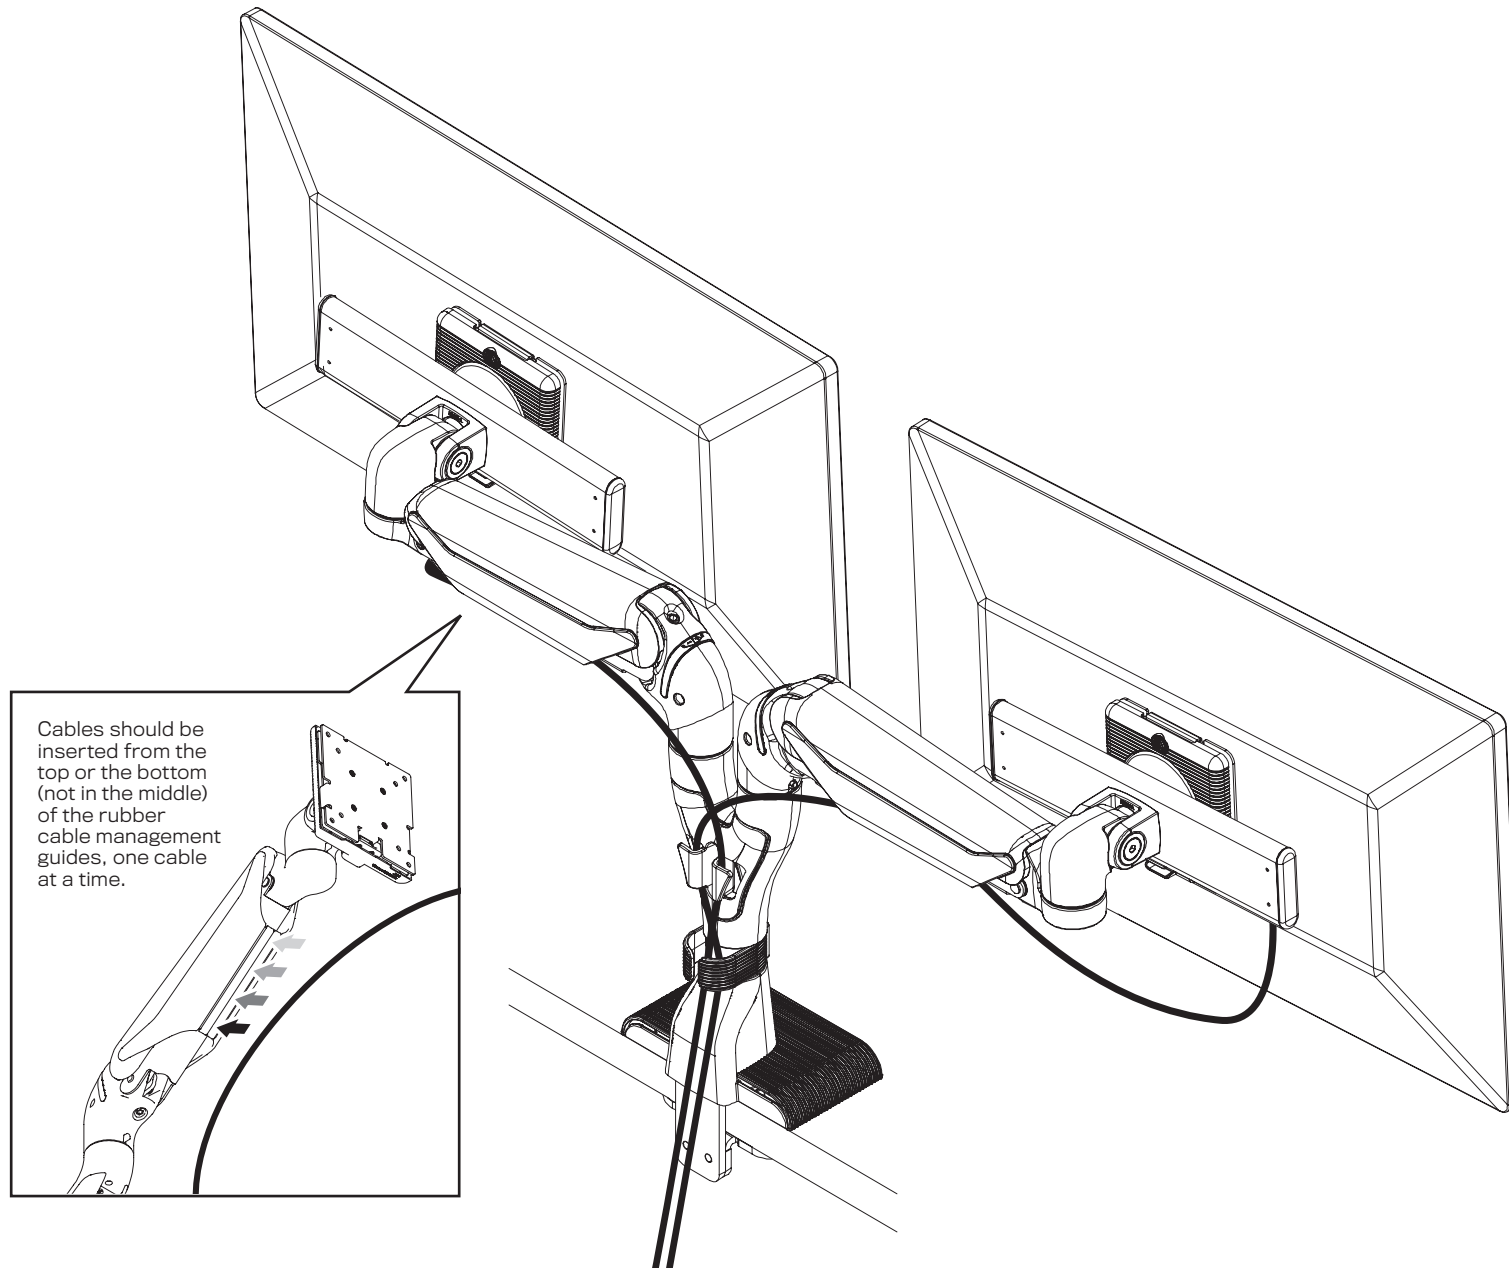

CABLE MANAGEMENT

31

