



EZ Lock™ Anvil Cover


Installation Instructions

The EZ Lock™ Anvil Cover is simple to install with a few taps with a dead blow hammer

1. **Insert the end of the cover into the keyway, making sure it snug against the cover beside it.**
2. **Wrap the cover around the cylinder.**
3. **Insert the second end of the cover into the keyway so that the two sets of knuckles engage each other.**
4. **Remove the covers as needed by prying below the keyway lock bar with the EZ1000 pry bar or similar tool.**

To avoid damaging the cover DO NOT attempt to pry under the cover in any other location.

Rotate the position of the covers on the cylinder as needed to increase cover life and to improve cutting quality.

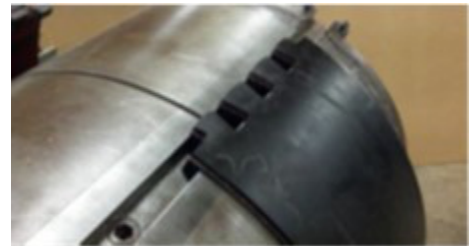

Step # 1



Step # 3



Step # 4

IMPORTANT!! DO NOT GRIND COVERS BEFORE DIE CUTTING ON THEM