

KLIC

A PREMIUM POWDER DOSING TOOL

GETTING STARTED ►

MEET YOUR KLIC



USING YOUR KLIC

Before you load any powder, flip to Setup & Adjustments to install your Dry Pack and set your dose sizes. Both should be done with your KLIC empty.




1 FILL

Slide the door open and pour your powder inside. Keep the powder loose and don't pack it too tightly. Close the door before use.

A small bag fits right into the opening so nothing spills.

KLIC performs best with dry, finely ground powder; our grinder helps you get there.

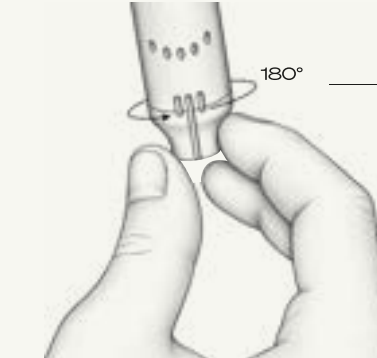

2 TWIST

To load a dose, hold your KLIC upright and turn the knob 180° until the notches on the knob and body align and you feel the click.

This rotates a filled dose cup from the powder compartment into the chamber. Your measured dose is now ready and should be taken immediately.



3 INHALE

Bring the intake hole to one nostril and sniff gently.

Keep your KLIC upright and your fingers clear of the five aeration holes. They need airflow to deliver a smooth dose.

The included nose tips can be fit into the intake hole and are entirely optional.

KLIC

CARE & TRAVEL

CARE

Disassemble and brush out residue. Clean with rubbing alcohol or water. Dry fully before reassembling.

Not dispensing smoothly?
Loosen the powder from clumping and use drier, finer powder.

Hard to turn?
Remove the knob and clear any buildup. Check that the o-ring is seated.

TRAVEL

Empty and clean KLIC before you fly. Carry-on is recommended. As a metal object, it may be flagged for a manual check - presenting it empty and clean resolves this easily.

MORE HELP & VIDEOS

KLIC is for legal powders only such as snuff tobacco, cacao, nootropics, and herbal blends.



klifecycle.com/begin



hello@klifecycle.com

SETUP & ADJUSTMENTS

1

REMOVE THE KNOB

Hold your KLIC upside down, then twist and pull at the same time to release the knob. To reassemble, press in while twisting gently.

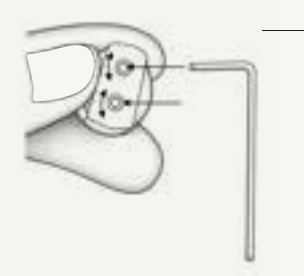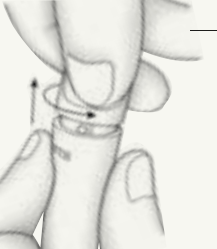

2

ADJUST YOUR DOSE

Remove the knob first so you can watch the dose cups move as you adjust. Insert the tool into either screw on the knob and turn to raise or lower the cup.

Stop at the first resistance (about 3 mm deep) to avoid stripping the screw.

One notch can mark the smaller dose, two notches the larger; set them apart, or keep them equal.



You can use the slide door to push the Dry Pack in until it locks.

3

INSTALL THE DRY PACK

With the knob off, push the Dry Pack in "TOP" side first and slide it all the way up the chamber until it locks.

Don't open a Dry Pack until you're ready to use it, and replace it once the beads turn from orange to dark green.



Do not pour in here

4

ALTERNATE LOADING

With the knob off, set the funnel over the powder compartment and pour, then reassemble

This method is also best for emptying your KLIC (e.g. when changing your Dry Pack). You can remove the knob and pour from the powder compartment back into a container.

IN THE BOX



KLIC



3 Dry Packs



Pouch



Funnel



Brush



2 nose tips
Optional



Adjustment tool

KLIC